




Plug Master Industrial Co., Ltd.


P8-070-3 Assembling Instruction

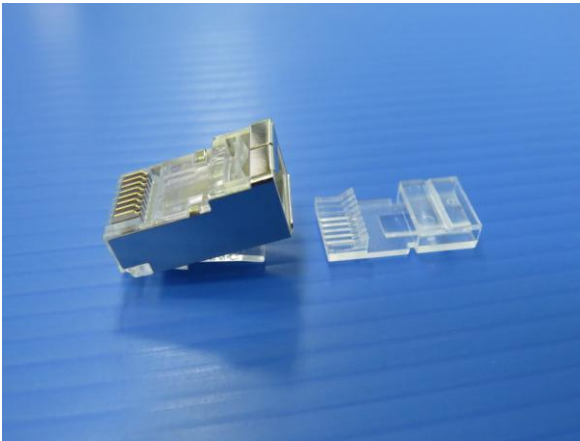


1. P8-070-3 8P8C-F-RV




2. Strip and removed 20mm of jacket.

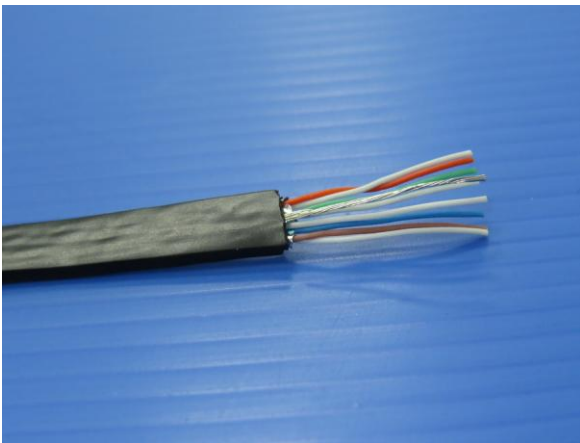


3. Removed shielding layer then untwist and order pairs. Conductor OD: 0.55mm

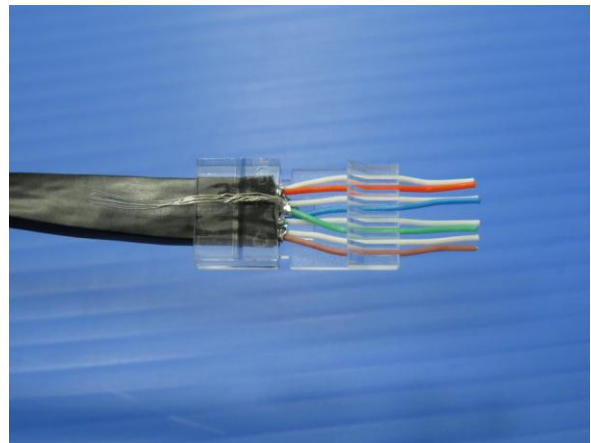

4. Slide into the liner.

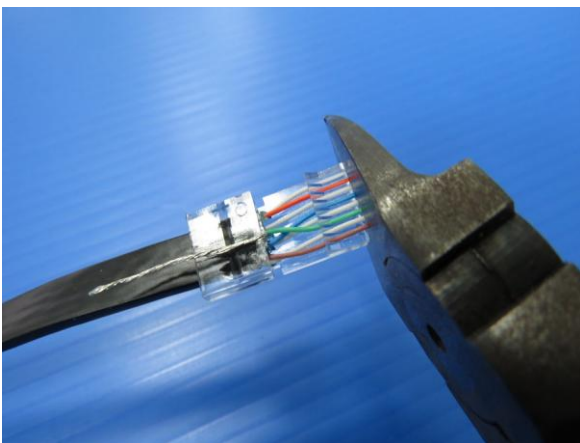

5. Trim.

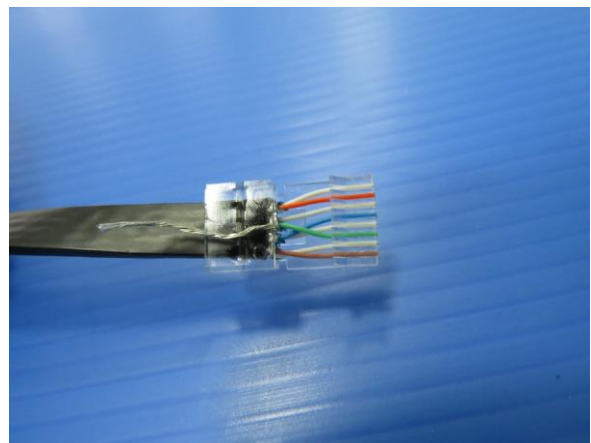


6. After Trimming.




Plug Master Industrial Co., Ltd.


P8-070-3 Assembling Instruction

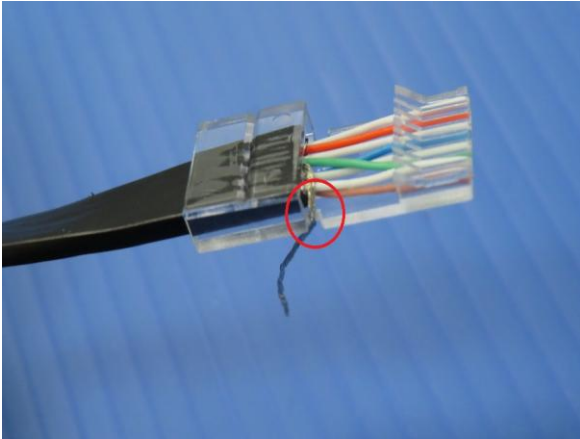

7. Bend the drain wire to left or right notch of liner.

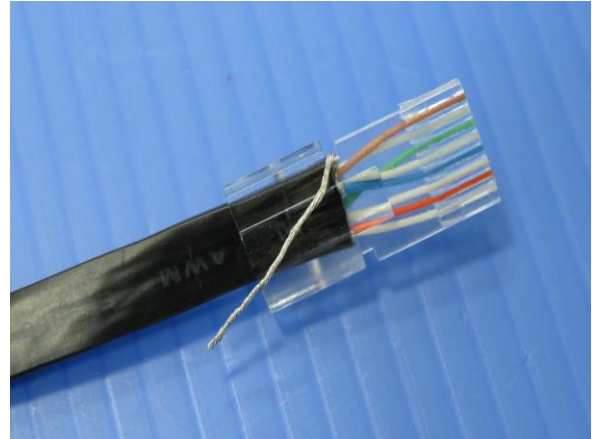


8. After bending the drain wire.

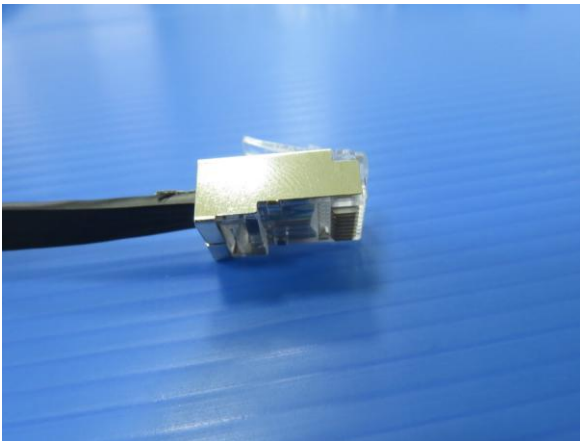


9. Slide assembly into the PLUG body.



10. Crimping.

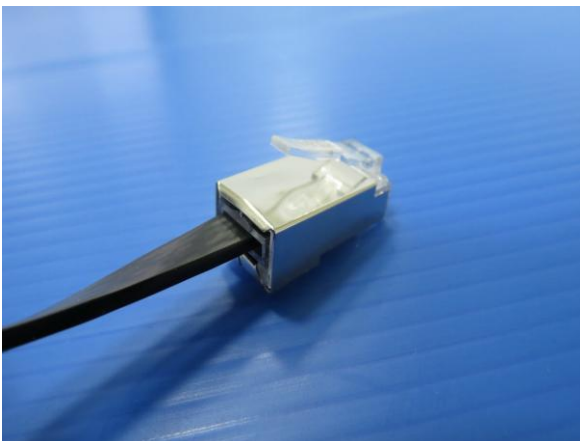

11. Trim drain wire.

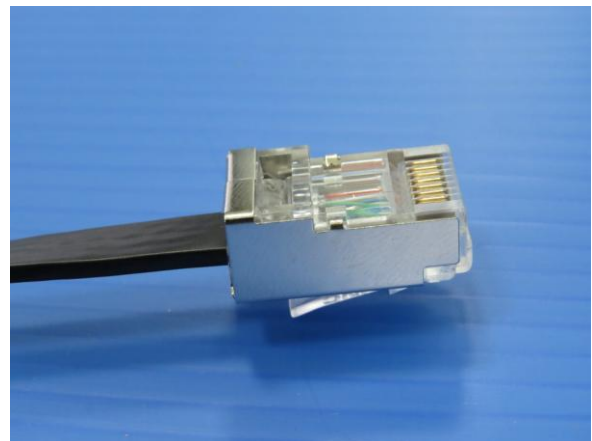

12. Assembly process completed.